


How to configure wireless on Siemens SpeedStream 6520?


How to configure wireless on Siemens SE568?

Siemens SE568/6520

1. First connect the network cable from LAN port on the Siemens router to NIC on the computer and make sure that the LAN card is enabled and connected with LAN IP.
2. Go to the router page 192.168.254.254.
3. Click on 'GO' button on the top left to log in as Administrator.

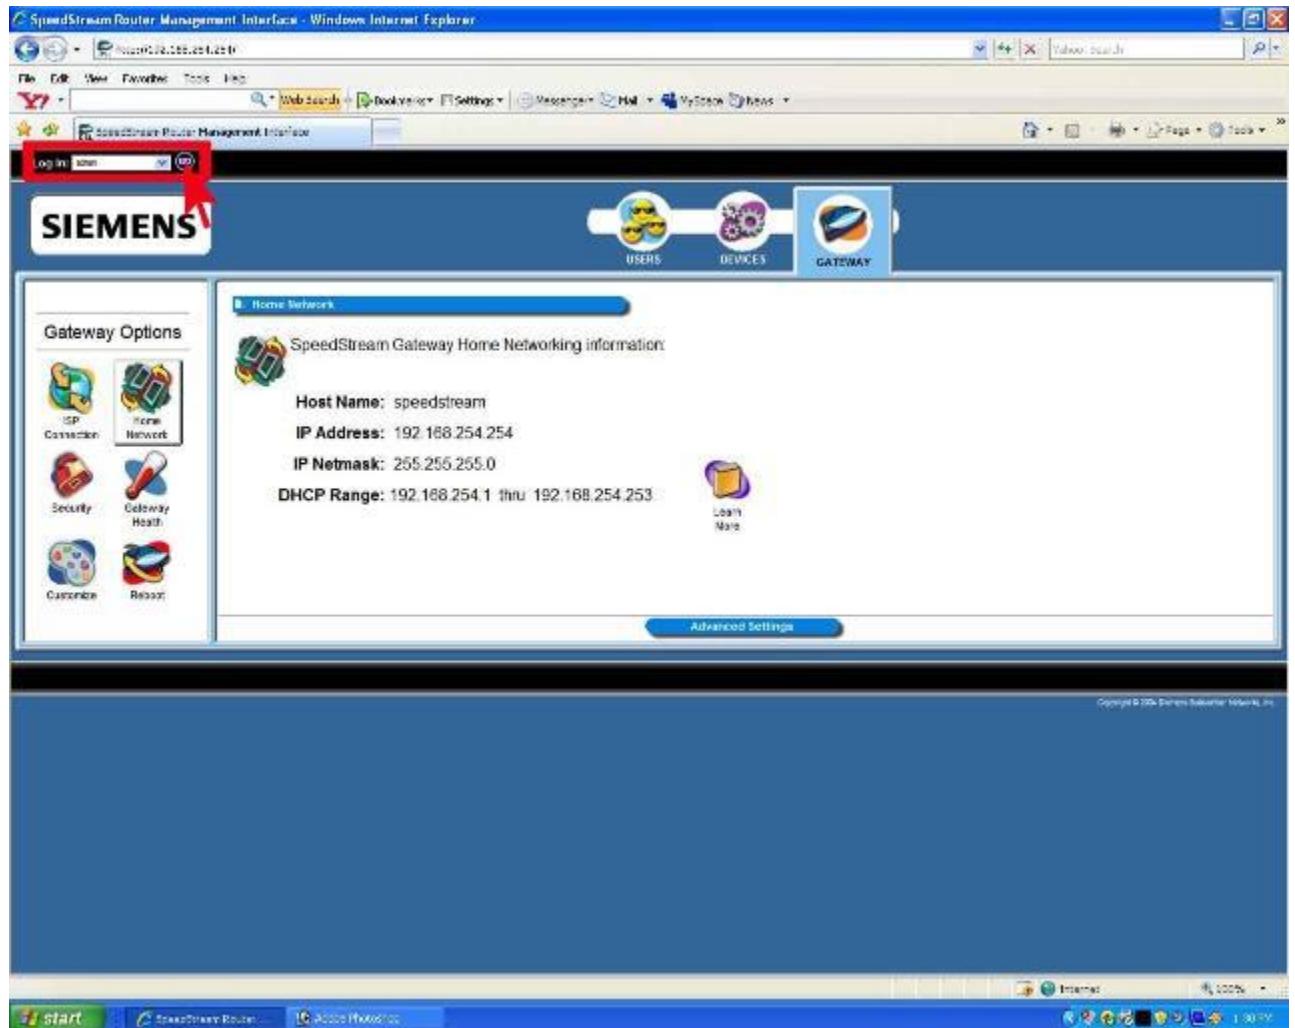

4. Enter the password as 'admin' & click 'Log In'.

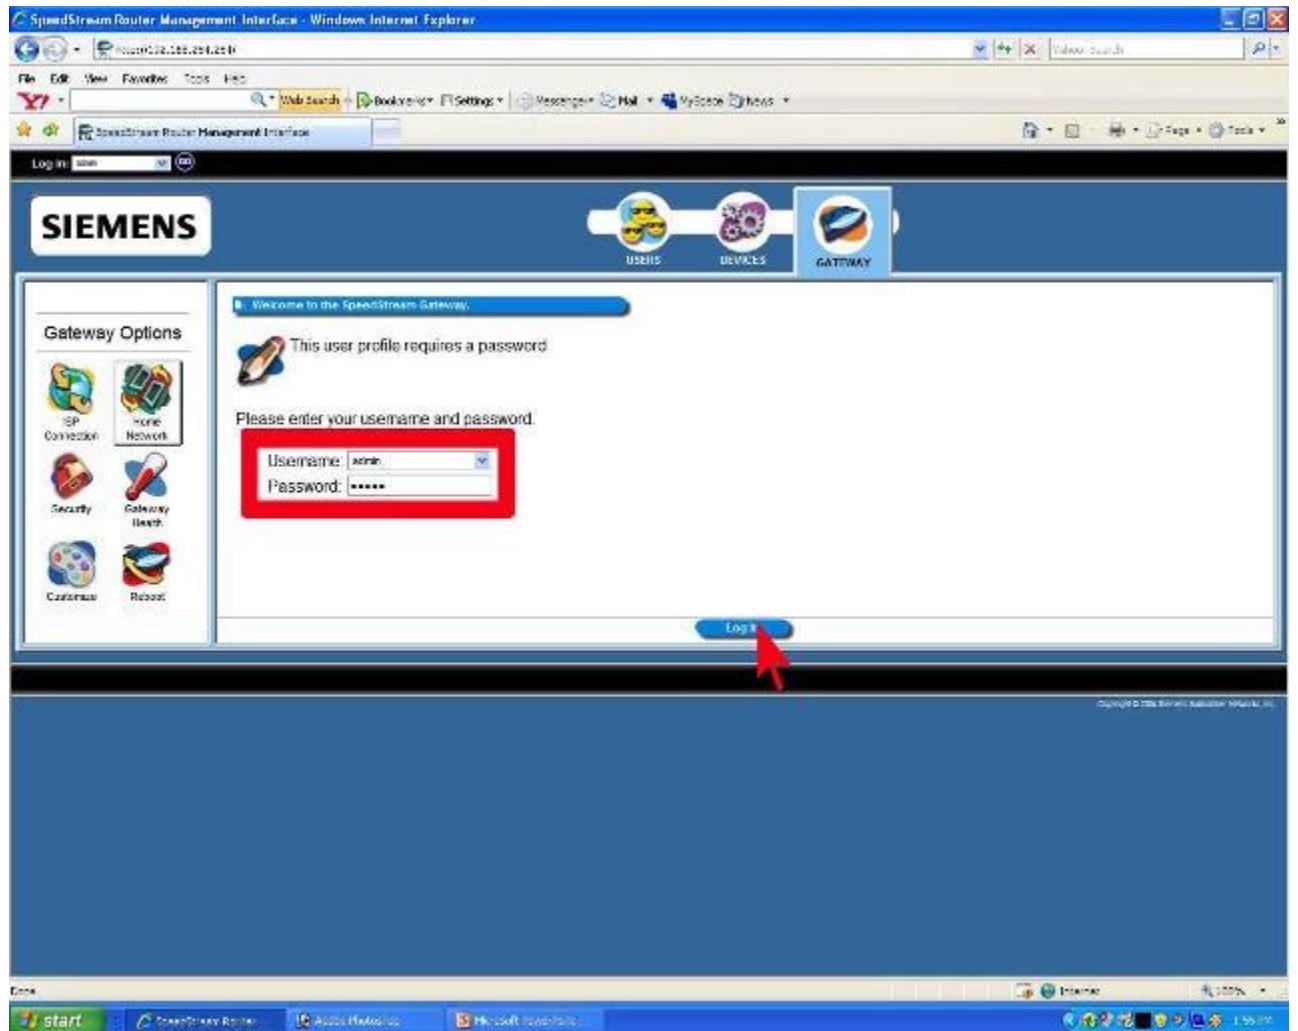

5. Click on 'Home Network'.



The screenshot shows the Siemens SpeedStream Router Management Interface in a Windows Internet Explorer browser. The main menu on the left includes options like Gateway, ISP Connection, Security, Gateway Health, Customize, and Reset. The central panel displays 'SpeedStream Router' information, specifically 'Gateway Info'. It shows the system type as 'SpeedStream 0001 Series', DSL connection information (Router IP Address: 97.100.231.254, WAN IP Address: 97.97.232.110), and various statistics such as uptime (9 days, 1 hour, 5 minutes, 45 seconds). The top navigation bar includes links for Web Search, Bookmarks, Settings, Messenger, Mail, MySpace, News, and Help. The bottom taskbar shows icons for Start, Internet Explorer, and Microsoft Word.

From the Gateway section you can access and manage Internet connectivity and Home Networking. For diagnostics and statistics go to Gateway Health, and to setup security and firewall settings go to Security. Finally, to change your interface or choose a language, select Customize.

Below is a quick summary of the SpeedStream Gateway information:


Gateway Info:

System Type: SpeedStream 0001 Series


DSL Connection Information:

- Router IP Address: 97.100.231.254
- WAN IP Address: 97.97.232.110
- Protocol: PPPoE
- Config Port: 333.4/33.3/33
- Firmware Port: 334.253.1/1C
- MAC Address: 00:10:01:21:07:07
- Up Time: 9 days, 1 hour, 5 minutes, 45 seconds


6. Click on 'Advanced Settings'.

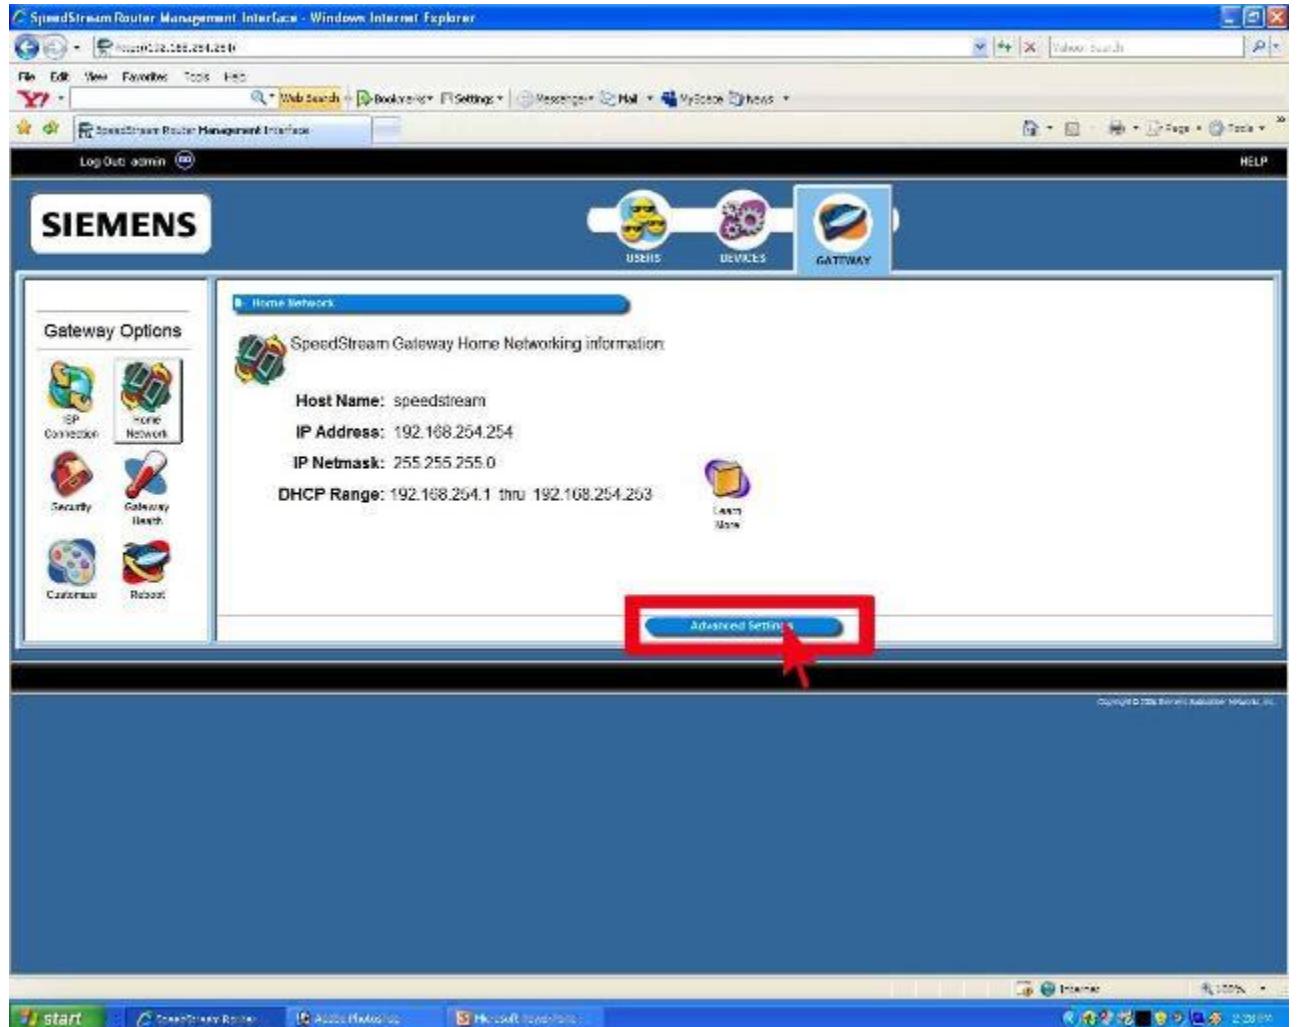


7. Click on 'Configure the Local SpeedStream Gateway Wireless Network' to go to wireless settings.

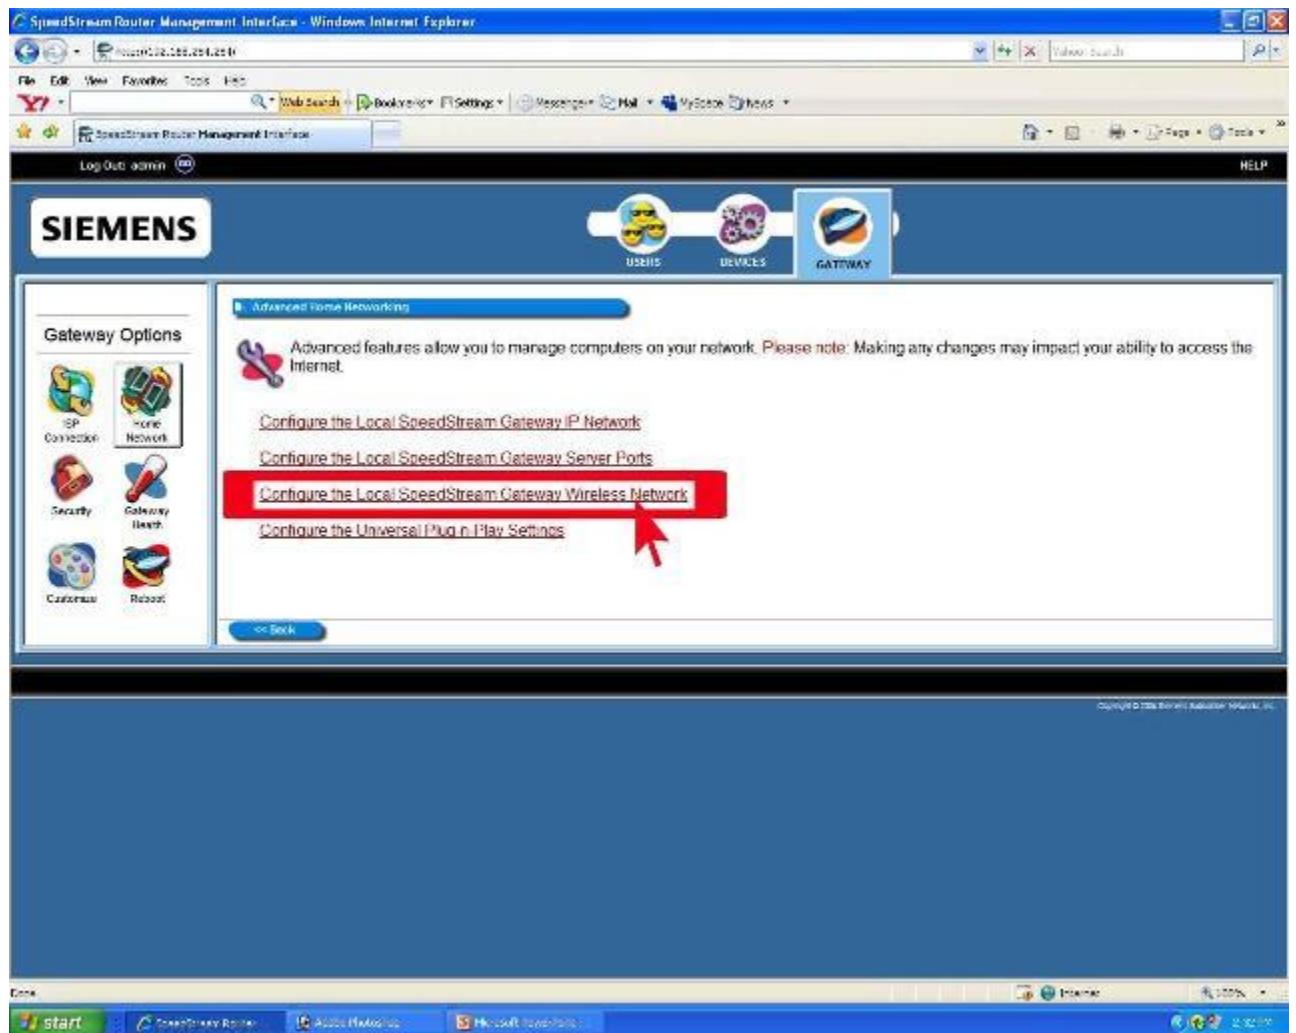


- Click on 'Begin Wireless Wizard' to start the wireless configuration.

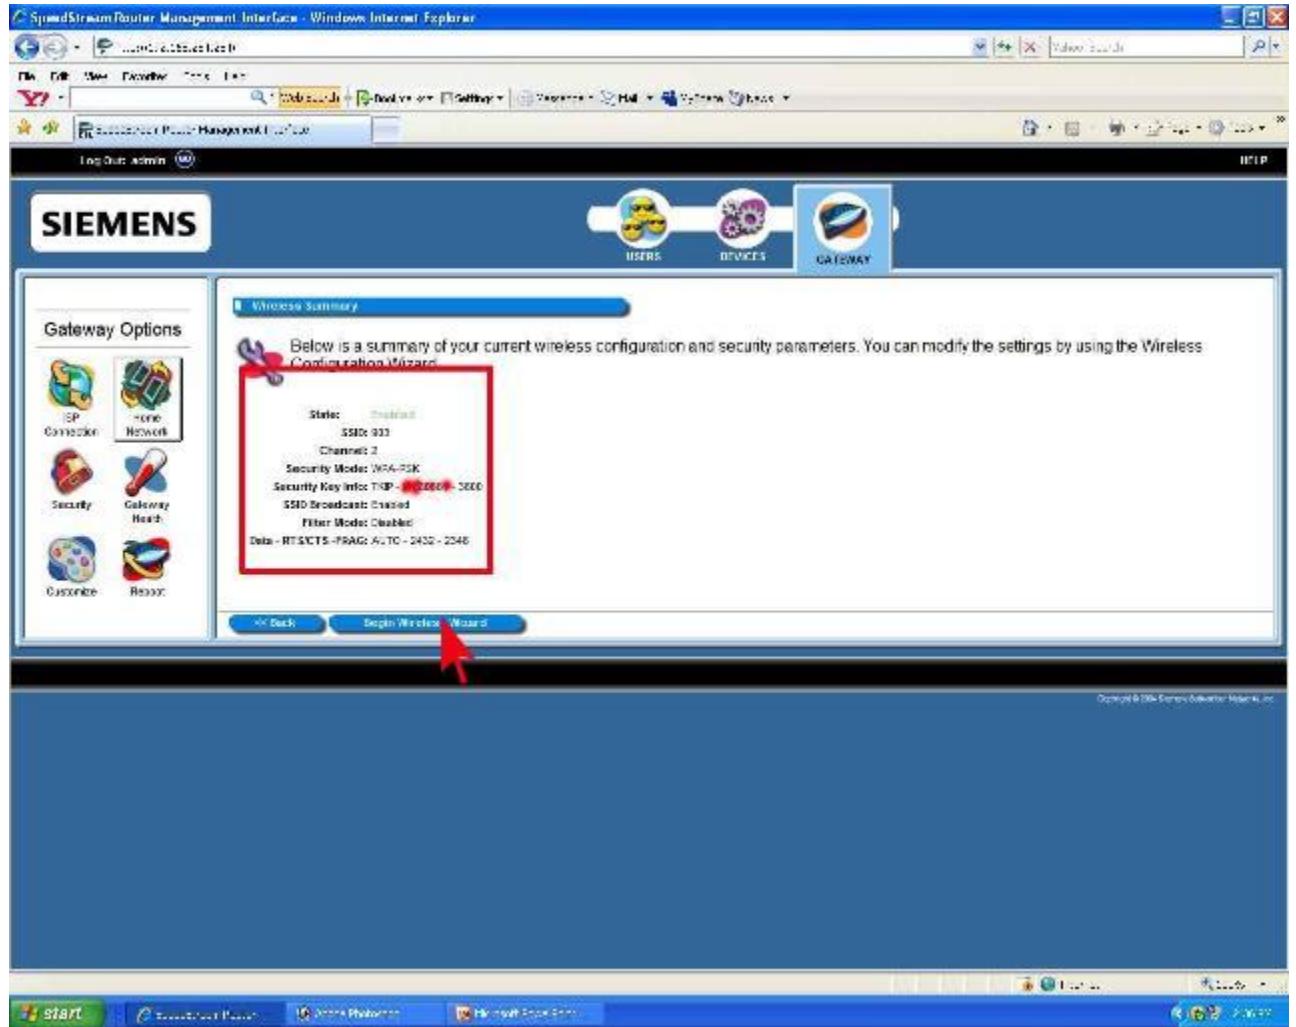

9. Select 'Enable' under the 'Wireless Interface'.
10. Enter any name in 'SSID' (This will be name of the wireless network).
11. Select 'Enable Auto Scan on Power On'.

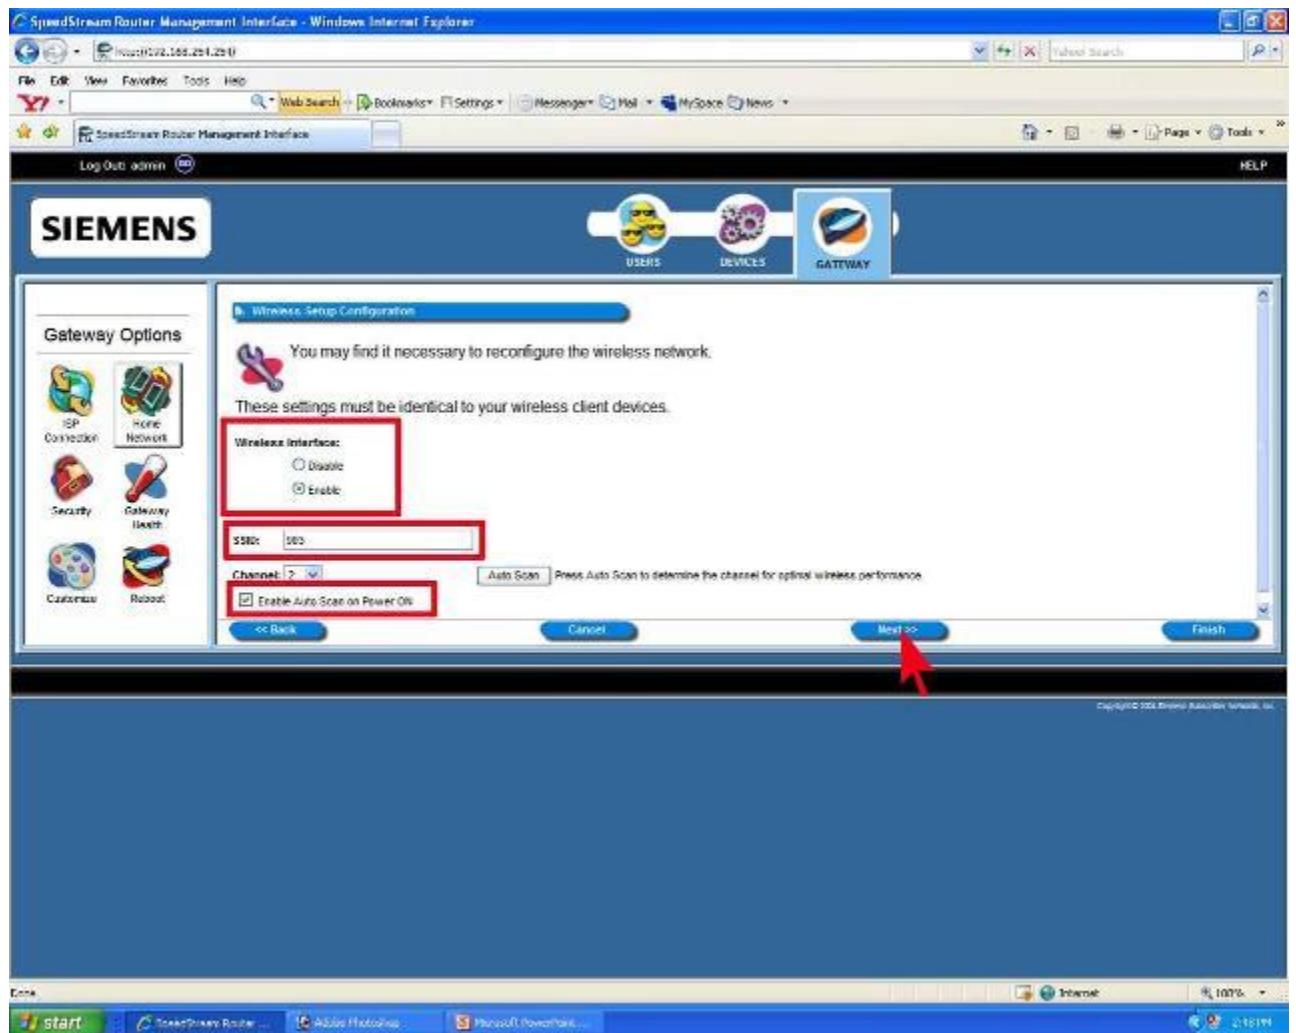


12. Click 'Next'.

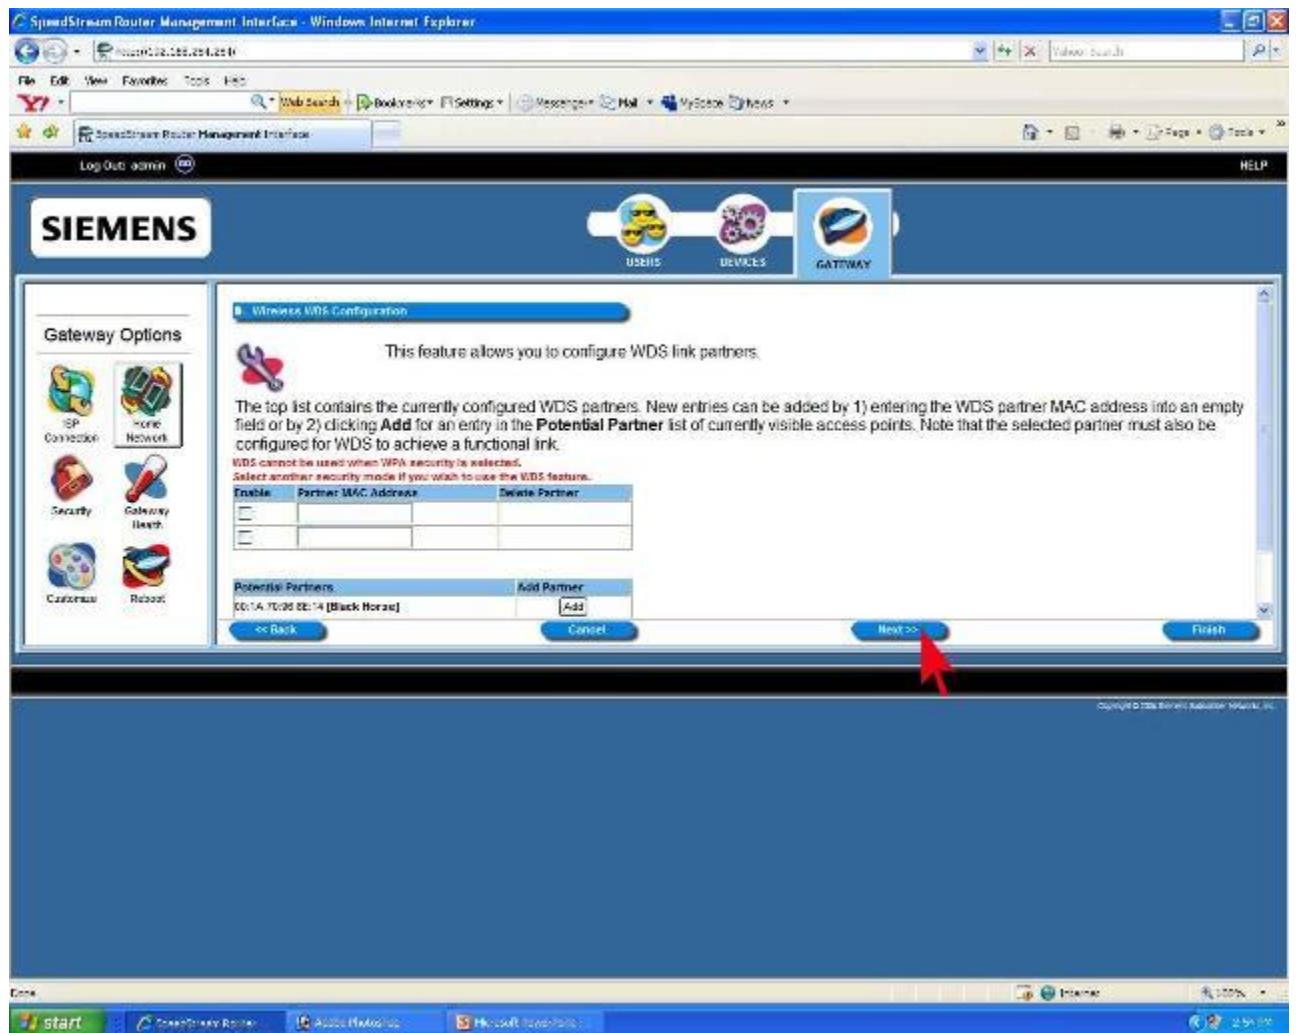


13. Select the 'Security Mode' as 'WPA-PSK TKIP'.
14. Select 'Enable SSID Broadcast'.
15. Click 'Next'.



16. Enter the password in the 'Shared Key' field. (at least 8 characters long).
17. Click on 'Finish'.

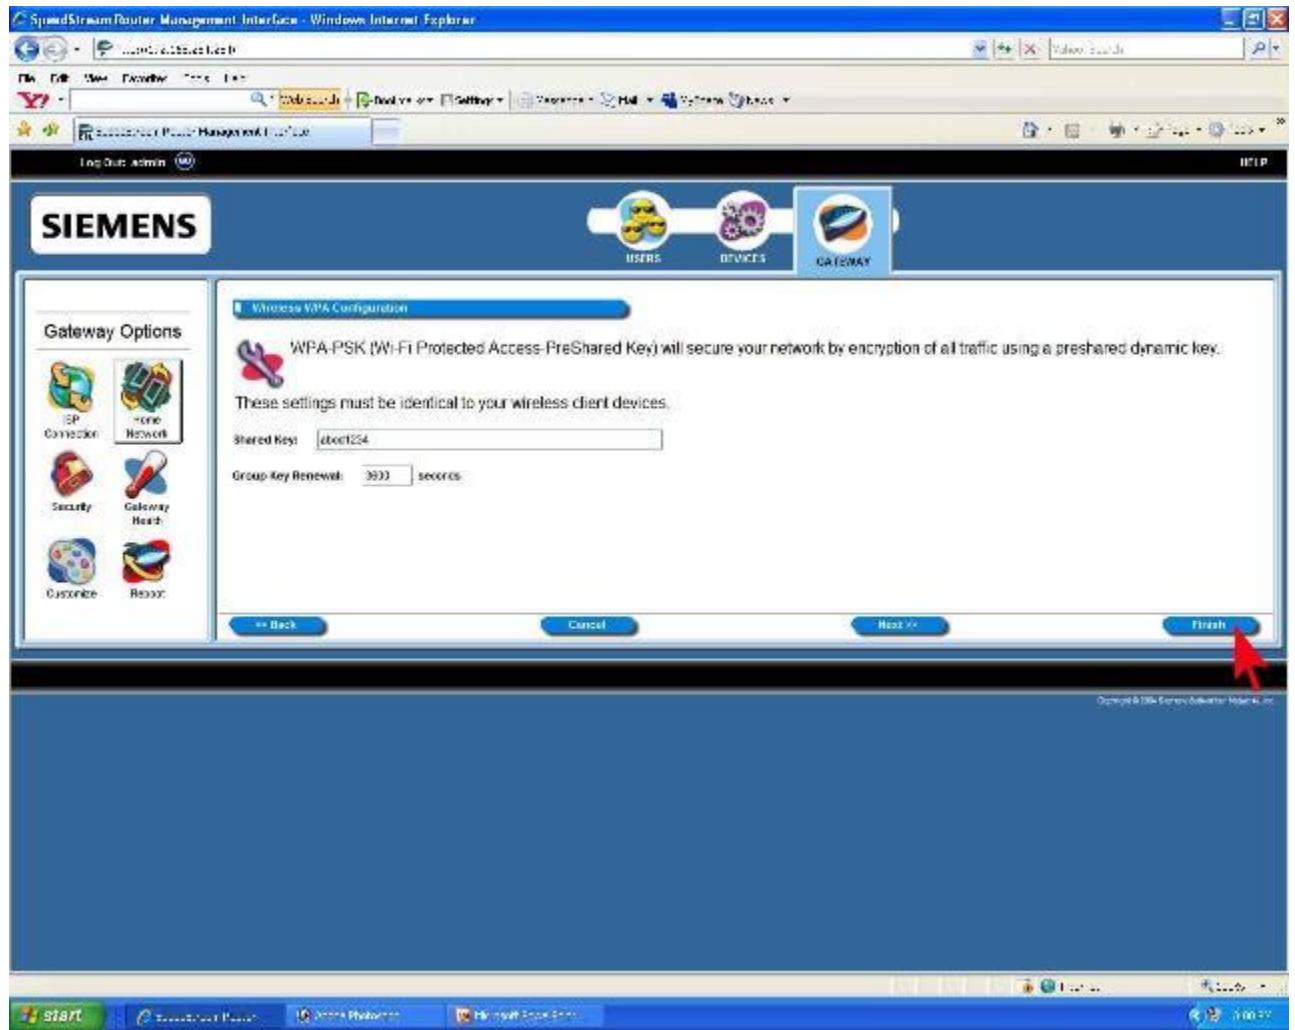

18. Click on 'Reboot'.

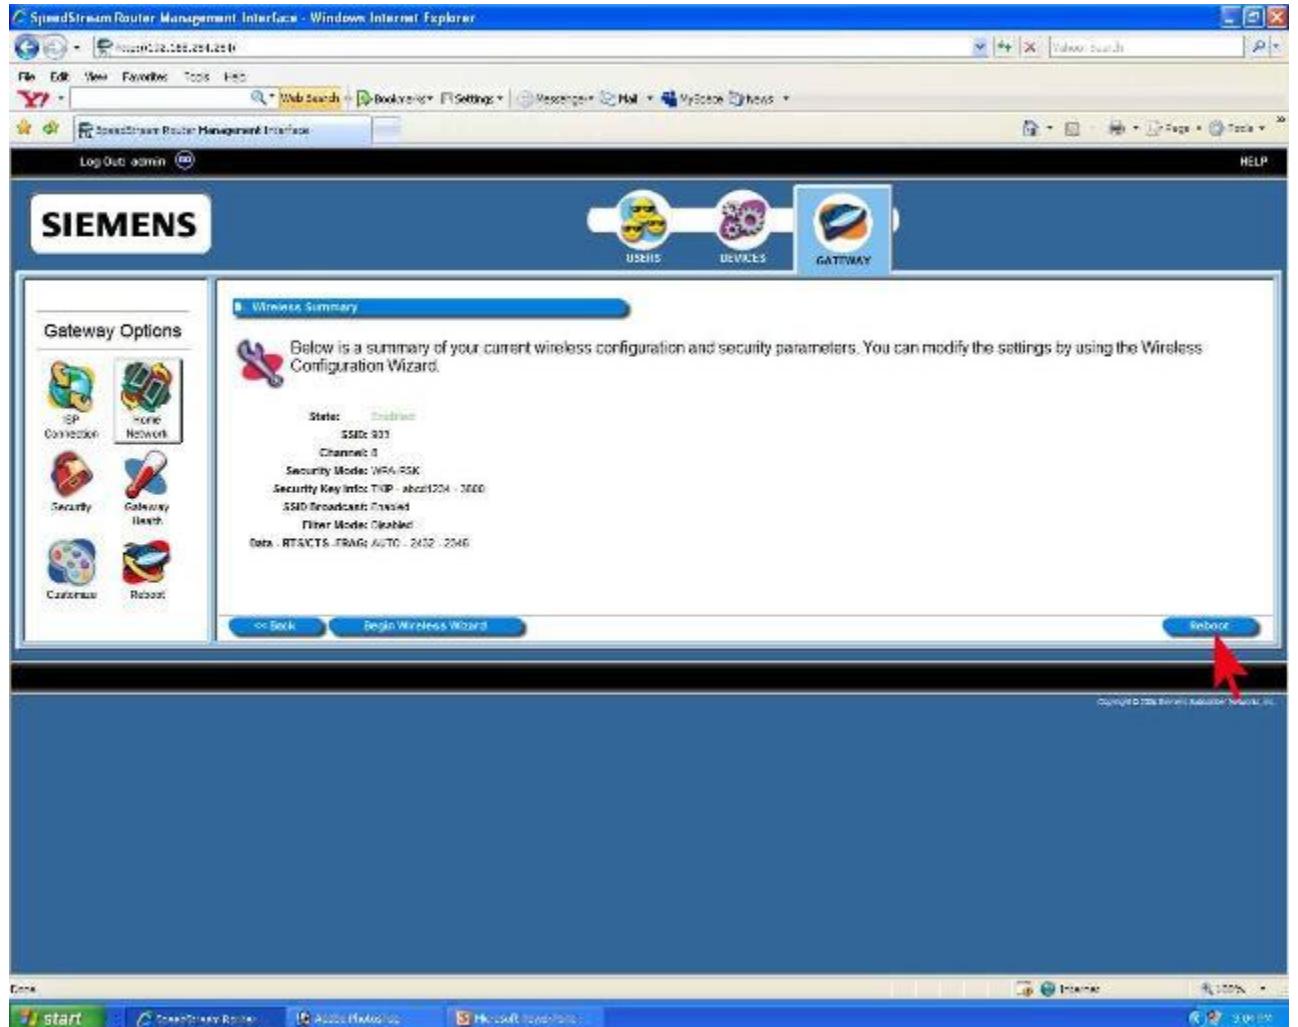

19. Click again on 'Reboot' to restart the router.

