


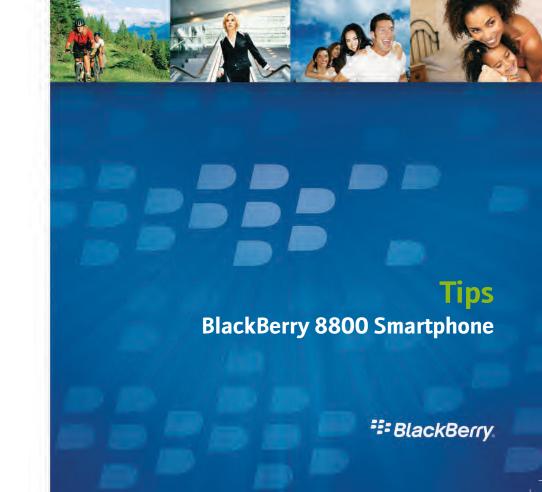

©2007 Research In Motion Limited. All Rights Reserved. The BlackBerry and RIM families of related marks, images, and symbols are the exclusive properties of Research In Motion Limited. RIM, Research In Motion, BlackBerry, "Always On, Always Connected" and the "envelope in motion" symbol are registered with the U.S. Patent and Trademark Office and may be pending or registered in other countries. All other brands, product names, company names, trademarks, and service marks are the properties of their respective owners.

MAT-14163-001-001 | PRINTSPEC-020 | RBM41GW



Start me up

Thank you for choosing a BlackBerry® smartphone! See the *Getting Started Guide* that came with your device for step-by-step instructions for your device.

Setup checklist

Complete the following tasks to set up your device. See the *Getting Started Guide* that came with your BlackBerry® device for help.

- Insert the SIM card
- Insert the battery
- Charge the battery
- Complete the setup wizard

Keys and features



Typing tips

- To capitalize a letter, hold the letter key until the capitalized letter appears or press the key and the letter key.
- To type the alternate character on a key, hold the At key and the character key.
- To type a symbol, press the [SYM] key. Type the letter that appears below the symbol.
- To type an accented or special character, hold the letter key and roll the trackball to
 the left or right. Release the letter key when the accented or special character
 appears. For example, to type ü, hold appears.
- To turn on NUM lock, press the AT key and the 🛳 key.
- To turn off NUM lock, press the ALT key.

Save time

See the *Getting Started Guide* that came with your BlackBerry® device or click **Help** on your device for more information about using your device.

Home screen tips

- To open the application list, press the key.
- To return to the Home screen, press the key.
- To lock the keyboard, on the Home screen or in the application list, click **Keyboard** Lock.
- ullet To unlock the keyboard, press the ullet key and the ullet key.
- To lock the device, set a password. On the Home screen or in the application list, click Lock.
- To unlock the device, type your password. Press the key.
- To turn on standby mode, hold the **Mute** key.

Phone tips

- To make a call from the Home screen, type the phone number. Press the key.
- To end a call, press the key.
- To turn on or turn off mute during a call, press the **Mute** key.
- To turn on or turn off the speakerphone during a call, press the sey.
- To adjust the volume during a call, press the Volume keys.
- To add an extension to a phone number, press the key and the key. Type the extension number.

Try this

Make a call using a voice command.

- 1. In the address book, press the key.
- Click New Address.
- 3. Type the contact information.
- 4. Click the trackball.
- Click Save.
- 6. In the voice dialing application, wait for the sound.
- 7. Say "Call" and a contact name or phone number.

To end the call, press the key.

Message tips

- To move to the top of a message list, press $\binom{r}{r}$.
- To move to the bottom of a message list, press $\begin{bmatrix} I \\ B \end{bmatrix}$
- To move to the next date in a message list, press 7.
- To reply to a message, press $\begin{bmatrix} \mathbf{3} \\ \mathbf{R} \end{bmatrix}$
- To forward a message, press $\begin{bmatrix} \mathbf{a} \\ \mathbf{F} \end{bmatrix}$
- To highlight adjacent messages, hold the 🛦 key and roll the trackball.

Try this

Copy text in a message and paste it into another application.

- 1. In a message, place the cursor before the text that you want to copy.
- 2. Press the key and roll the trackball.
- 3. Click the trackball.
- 4. Click Copy.
- 5. Place the cursor where you want to paste the text.
- 6. Click the trackball.
- 7. Click Paste.

Browser tips

- To follow a link, click the link.
- To move to a specific web page, press $\lceil \cdot \rceil_{\mathbf{G}}$.
- To return to the home page, press $\begin{bmatrix} i \\ H \end{bmatrix}$.
- To open the bookmark list, press κ .
- To add a bookmark, press
- To view a list of web pages that you have visited recently, press 7.
- To refresh a web page, press $\begin{bmatrix} \mathbf{3} \\ \mathbf{R} \end{bmatrix}$.
- To stop loading a web page, press the > key.
- To close the browser, hold the > key.

Try this

Move through a web page line by line.

- On a web page, press the key.
- 2. Click Select Mode.

To select only links and fields as you move through a web page, press the **\(\vec{\vec{v}}\)** key. Click **View Mode**.

Organizer tips

- To move to the next day, week, or month in the calendar, press the FPAGE key.
- To move to the previous day, week, or month in the calendar, press the key and the FPAGE key.
- To convert a measurement in the calculator, type a number. Press the key. Click **To Metric** or **From Metric**. Click a conversion type.
- To search for a contact in a list of contacts, type the contact name or initials separated by a space.

Try this

Assign a ring tone to a contact.

- In the address book, highlight a contact.
- 2. Press the key.
- 3. Click Edit.
- 4. Click the trackball.
- 5. Click Add Custom Phone Tune.
- 6. Set a ring tone.
- 7. Press the key.
- 8. Click Save.

Media tips

- To zoom in to a picture, press .
- To zoom out from a picture, press $\begin{bmatrix} \tau \\ D \end{bmatrix}$
- To zoom to the original picture size, press $\begin{bmatrix} 7 \\ w \end{bmatrix}$.
- To pause a slide show, press the FPAGE key.
- To resume a slide show, press the SPAGE key again.
- To pause a video or song, press the Mute key.
- To resume playing a video or song, press the **Mute** key again.

Try this

Use a picture as your Home screen background.

- 1. In the media application, click a media type.
- 2. Click a media folder that contains pictures.
- 3. Highlight a picture.
- 4. Press the key.
- 5. Click **Set As Home Screen Image**.

To clear the picture from the Home screen, press the key. Click **Reset Home Screen Image**.