




Contents

Siemens 504 AGU (ADSL Network) 2

How to configure Internet on Siemens 504AGU? (GPON Network) 4

Siemens 504 AGU (ADSL Network)

1. Start your Internet browser.
2. Enter the IP address of the router in the browser's address field:
http://192.168.254.254, The login screen appears:

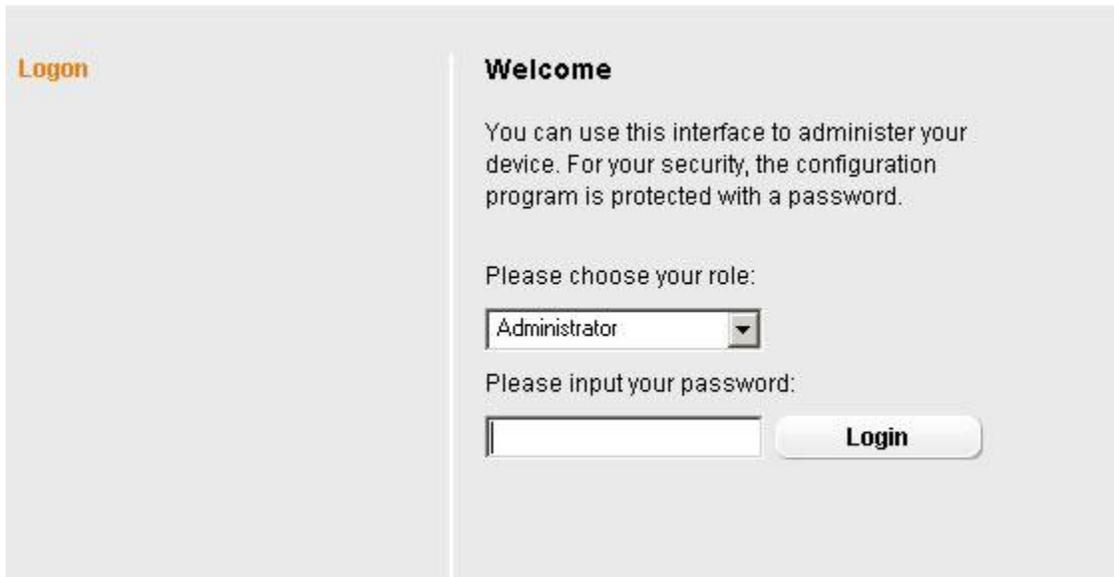

Logon

Welcome

You can use this interface to administer your device. For your security, the configuration program is protected with a password.

Please choose your role:

Administrator

Please input your password:

Login

3. The default password generally required is admin.
4. Click Login.
5. A page with security information will appear > Click OK.

- Click Advanced Settings:



The screenshot shows the 'Advanced Settings' tab selected. On the left, a navigation menu lists 'Internet', 'Firewall', 'Address Translation (NAT)', 'Dynamic DNS', 'Qos', 'Local Network', 'Wireless Network', and 'Administration'. The 'Internet' section is expanded, showing 'Internet Connection' as the active sub-section. The main content area is titled 'Internet' and contains the following settings:

- Internet:** On Off
- Connection type:** ADSL (dropdown menu)
- Configure multiple connection services:** On Off
- Connection service selected to edit:** 0/50
- Connection services:**

VPI / VCI	Comment	
0 / 50	data	Delete
/		Add

Buttons for 'OK' and 'Cancel' are located at the bottom of the configuration area.

- Click Internet > Internet Connection:



The screenshot shows the 'Advanced Settings' tab selected. On the left, the navigation menu is the same as in the previous screenshot. The 'Internet' section is expanded, and 'Internet Connection' is now the active sub-section. The main content area is titled 'Internet Connection' and contains the following settings:

- Connection service selected to edit:** 0 / 50
- Protocol:** PPPoA (dropdown menu)
- User name:** [text input field]
- Password:** [password input field]
- Confirm password:** [password input field]
- Host name:** gigaset
- MTU:** 1492
- As Default Gateway:**
- Line mode:** Automatic (dropdown menu)
- Encapsulation:** VC MUX (dropdown menu)
- QoS class:** UBR (dropdown menu)
- VPI / VCI:** 0 / 50
- Connection mode:** Connect on demand (dropdown menu)
- Idle time before disconnect:** 3
- UPnP:** On Off

Buttons for 'OK' and 'Cancel' are located at the bottom of the configuration area.

8. Enter as required for PPPoA or PPPoE and enter username, password, confirm password and make sure that:
 1. The connection mode is on Always On.
 2. Encapsulation is LLC
 3. The VPI/VCI is 0/50
9. Click OK!

How to configure Internet on Siemens 504AGU?

Siemens 504 AGU (GPON Network)

1. After you login to the router - Go to Advanced Settings - Internet Connection - Select the Connection type as 'Ethernet' and then Apply, the router will reboot.
2. Connect the Ethernet cable from Huawei to LAN1/WAN port of the Gigaset router and connect the PC/laptop to 2, 3 or 4th port of the router.

Gigaset 504 AGU



Home Advanced Settings Status

Internet

- Internet Connection
- Firewall
- Address Translation (NAT)
- Dynamic DNS

Local Network
Wireless Network
Administration

Internet

Internet: On Off

Connection type: Ethernet

OK Cancel

3. Select Internet Connection on left hand side - Select the protocol as PPPoE - Enter the user name and password and click Ok to save the settings.

Gigaset 504 AGU

Home **Advanced Settings** Status

Internet

- Internet Connection**
- Firewall
- Address Translation (NAT)
- Dynamic DNS

Local Network

Wireless Network Administration

Internet Connection

Protocol: PPPoE

User name: Username

Password:

Confirm password:

Host name: gigaset


MTU: 1500

Connection mode: Always on

UPnP: On Off

OK Cancel

4. Click on Status -> Internet to view the status of router.

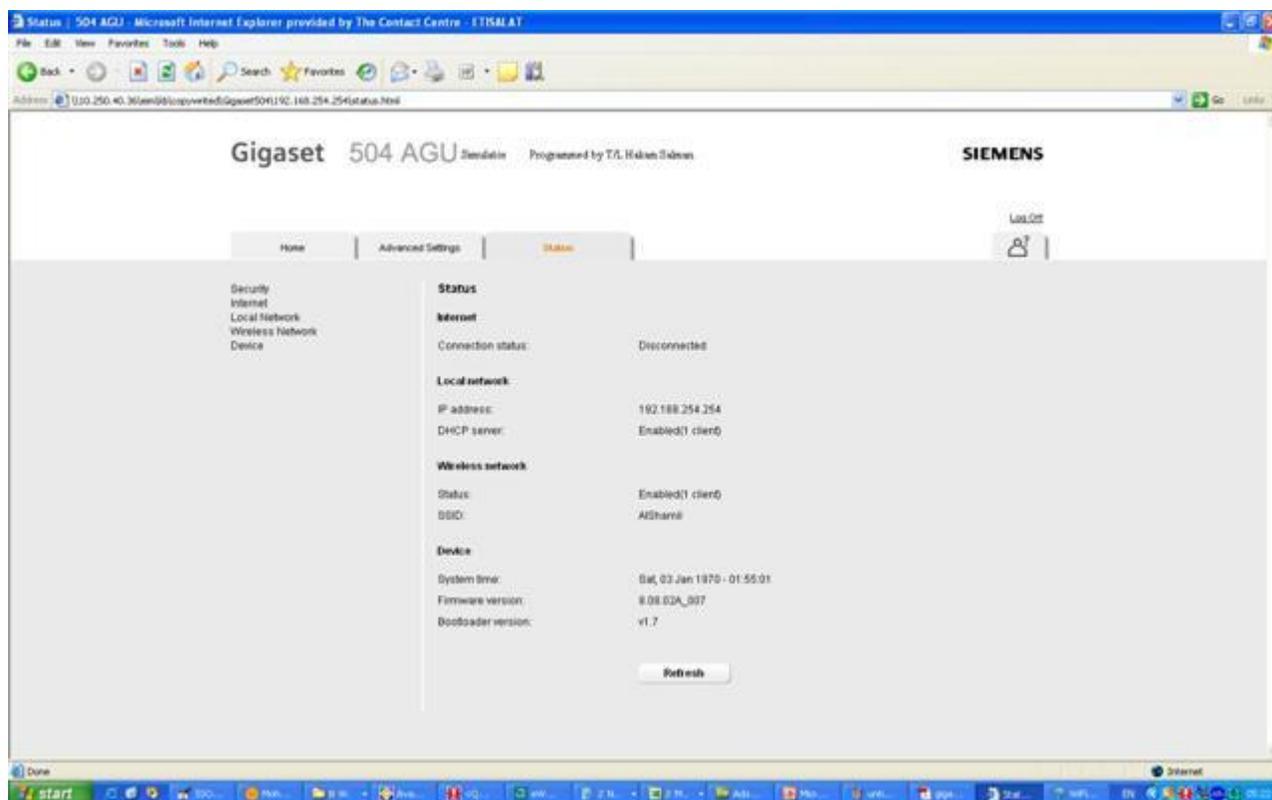

The screenshot shows a web browser window displaying the status page of a Gigaset 504 AGU router. The browser's address bar shows the URL: http://192.168.254.254/status.html. The page header includes the Gigaset logo, model number '504 AGU', and the Siemens logo. The main content area is divided into sections for 'Internet', 'Local network', 'Wireless network', and 'Device'. The 'Internet' section shows the connection status as 'Disconnected'. The 'Local network' section shows the IP address as '192.168.254.254' and the DHCP server as 'Enabled() client0'. The 'Wireless network' section shows the status as 'Enabled() client0' and the SSID as 'AlShams'. The 'Device' section shows the system time as '04, 03 Jan 1970 - 01:55:01', the firmware version as '8.08.03A_007', and the bootloader version as 'v1.7'. A 'Refresh' button is located at the bottom of the status information.

Section	Parameter	Value
Internet	Connection status	Disconnected
	Local network	
Local network	IP address	192.168.254.254
	DHCP server	Enabled() client0
	Wireless network	
Wireless network	Status	Enabled() client0
	SSID	AlShams
	Device	
Device	System time	04, 03 Jan 1970 - 01:55:01
	Firmware version	8.08.03A_007
	Bootloader version	v1.7
	Refresh	Refresh